INNOLUX DISPLAY CORPORATION LCD MODULE SPECIFICATION

T070TN07
070-07-TT-01
006/01/09
1

□ Preliminary Specification
■ Final Specification

For Customer's Acceptance

Comment
*

Approved by	Reviewed by	Prepared by
\$\$\$\familia	Jarbhang 1/60	产助助 1/9'06



InnoLux copyright 2004 All rights reserved, Copying forbidden.

Record of Revision

Version	Revise Date	Page	Content
1	2006/1/9		Initial release



Contents:

1.	General Specifications	1
2.	Pin Assignment	2
	2.1. TFT LCD Panel Driving Section	2
	2.2. Backlight Unit Section	4
3.	Operation Specifications	5
	3.1. Absolute Maximum Rating	5
	3.1.1. Typical Operation Conditions	6
	3.1.2. Current Consumption	7
	3.1.3. Backlight Driving Conditions	7
	3.2. Timing Characteristics	8
	3.2.1. Timing Conditions	8
	3.2.2. Timing Diagram	10
4.	Optical Specifications	14
5.	Reliability Test Items	18
6.	General Precautions	19
	6.1. Safety	19
	6.2. Handling	19
	6.3. Static Electricity	19
	6.4. Storage	19
	6.5. Cleaning	19
7.	Mechanical Drawing	20
8.	Package Drawing	21
	8.1. Packaging Material Table	21
	8.2. Packaging Quantity	21
	8.3. Packaging Drawing	22



PAGE: 1/22

1. General Specifications

No.	Item	Specification	Remark
1	LCD size	7.0 inch	
2	Driver element	a-Si TFT active matrix	
3	Resolution	480X3(RGB)X234	
4	Display mode	Normally White, Transmissive	
5	Dot pitch	0.107(W)X0.370(H) mm	
6	Active area	154.08(W)X86.58(H) mm	
7	Module size	164.9(W)X100.0(H)X5.7(D) mm	Note 1
8	Surface treatment	Anti-Glare	
9	Color arrangement	RGB-stripe	
10	Interface	Analog	
11	Backlight power consumption	1.78W(Typ.)	
12	Panel power consumption	111mW(Typ.)	
13	Weight	167g±10%	

Note 1: Refer to Mechanical Drawing.

PAGE: 2/22

2. Pin Assignment

2.1. TFT LCD Panel Driving Section

Pin No.	Symbol	I/O	Function	Remark
1	GND	-	Ground	
2	V _{CC}	Р	Supply voltage for logic control circuit scan driver	
3	V_{GL}	Р	Negative power for scan driver	
4	V_{GH}	Р	Positive power for scan driver	
5	STVR	I/O	Vertical start pulse	Note 1
6	STVL	I/O	Vertical start pulse	Note 1
7	CKV	I	Shift clock input for scan driver	
8	U/D	I	UP/DOWN scan control input	Note 1, 2
9	OEV	I	Output enable control for scan driver	
10	V _{COM}	I	Common electrode driving signal	
11	V _{COM}	I	Common electrode driving signal	
12	L/R	I	LEFT/RIGHT scan control input	Note 1, 2
13	MOD	I	Sequential sampling and simultaneous sampling setting	
14	OEH	I	Output enable control for data driver	
15	STHL	I/O	Start pulse for horizontal scan line	Note 1
16	STHR	I/O	Start pulse for horizontal scan line	Note 1
17	СРН3	I	Sampling and shifting clock pulse for data driver	
18	CPH2	1	Sampling and shifting clock pulse for data driver	
19	CPH1	I	Sampling and shifting clock pulse for data driver	
20	V _{CC}	Р	Supply voltage for logic control circuit scan driver	

The copyright belongs to InnoLux. Any unauthorized use is prohibited.



PAGE: 3/22

21	GND	-	Ground	
22	V _R	I	Alternated video signal (Red)	
23	V _G	I	Alternated video signal (Green)	
24	V _B	I	Alternated video signal (Blue)	
25	AV _{DD}	Р	Supply voltage for analog circuit	
26	AV _{SS}	Р	Ground for analog circuit	


I: input, O: output, P: Power

Note 1: Selection of scanning mode

Setting of scan control input		IN/OUT	state for s	Scanning direction			
U/D	L/R	STVR	STVL	STHR	STHL		
GND	V _{CC}	0	I	0	1	Up to down, left to right	
V _{CC}	GND	I	0	1	0	Down to up, right to left	
GND	GND	0	I	1	0	Up to down, right to left	
V _{CC}	V _{CC}	I	0	0	I	Down to up, left to right	

Note 2: Definition of scanning direction.
Refer to the figure as below:

Up

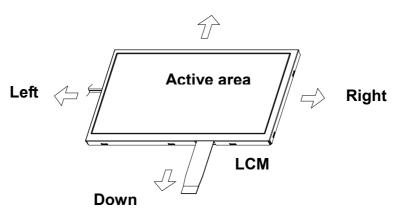

Note 3: MOD=H: Simultaneous sampling. MOD=L: Sequential sampling.

Please set CPH2 and CPH3 to GND when MOD=H.



PAGE: 4/22

2.2. Backlight Unit Section

Pin No.	Symbol	I/O	Function	Remark
1	н	Р	Power supply for backlight unit	Pink
2	GND	Р	Ground for backlight unit	White



PAGE: 5/22

3. Operation Specifications

3.1. Absolute Maximum Rating

(GND=AV_{SS}=0V, Note 3)

		,	IND-AVSS-OV, IN		
Item	Symbol	Val	Unit	Remark	
item	Cymbol	Min.	Max.	Onit	Kemark
	V _{CC}	-0.3	7	V	
	AV_{DD}	-0.3	7	V	
Power voltage	V_{GH}	-0.3	18	V	
	V_{GL}	-15	0.3	V	
	V_{GH} - V_{GL}	-	33	V	
Input signal voltage	Vi	-0.2	AV _{DD} +0.2	V	Note 1
input signal voltage	VI	-0.3	V _{CC} +0.3	V	Note 2
Operation temperature	T _{OP}	-30	85	$^{\circ}\!\mathbb{C}$	
Storage temperature	T _{ST}	-30	85	$^{\circ}$ C	

Note 1: V_R , V_G , V_B .

Note 2: STHL, STHR, OEH, L/R, CPH1~CPH3, STVR, STVL, OEV, CKV, U/D.

Note 3: The absolute maximum rating values of the module should not be exceeded. Once exceeded absolute maximum rating values, the characteristics of the module may not be recovered. Even in an extreme condition, may result in module permanently destroyed.



PAGE: 6/22

3.1.1. Typical Operation Conditions

(GND=AV_{SS}=0V, Note 4)

lto m	Cymala al	(0	Values		l lmi4	Domonis
Item	Symbol	Min.	Тур.	Max.	Unit	Remark
	V _{CC}	4.8	5	5.2	V	
Power voltage	AV _{DD}	4.8	5	5.2	V	
rowel voltage	V_{GH}	14.3	15	15.7	V	
	V_{GL}	-10.5	-10	-9.5	V	
	V _{iA}	0.2	-	AV _{DD} -0.2	V	Note 1
Video signal amplitude (V _R , V _G , V _B)	V _{iAC}	-	3	-	V	AC component
	V _{iDC}	-	AV _{DD} /2	-	V	DC component
	V _{CAC}	3.5	5.6	6.5	V	Note 2
V _{COM}	V _{CDC}	1.55	1.75	1.95	V	DC component
Input logic high voltage	V _{IH}	0.8V _{CC}	-	V _{CC}	V	Note 3
Input logic low voltage	V _{IL}	0	-	0.2V _{CC}	V	NOIE 3

Note 1: Refer to Fig.3-3-(a).

Note 2: The brightness of LCD panel could be changed by adjusting the AC component of VCOM.

Note 3: STHL, STHR, OEH, L/R, CPH1~CPH3, STVR, STVL, OEV, CKV, U/D.

Note 4: GND, V_{CC} , and V_{GL} are applied to LCD first and then V_{GH} is applied.



PAGE: 7/22

3.1.2. Current Consumption

 $(GND=AV_{SS}=0V)$


ltem	Symbol	Values			Unit	Remark	
item	Symbol	Min.	Тур.	Max.	Onit	Nemark	
Current for Driver	I _{GH}	-	0.2	0.5	mA	V _{GH} =15V	
	I _{GL}	-	0.8	1.5	mA	V _{GL} = -10V	
	I _{CC}	-	3.0	6.0	mA	V _{CC} =5V	
	I _{DD}	-	17	30	mA	AV _{DD} =5V	

3.1.3. Backlight Driving Conditions

ltem	Symbol		Values		Unit	Remark	
item	Symbol	Min.	Тур.	Max.	Offic	Kemark	
LED voltage	V _L	-	9.9	10.5	V	Note 2	
LED current	IL	-	20	-	mA	Note 2	
LED life time	-	20,000	-	-	Hr	Note 1	

Note 1: The "LED life time" is defined as the module brightness decrease to 50% original brightness that the ambient temperature is 25°C and I_L =20mA.

Note 2: The LED driving condition is defined for each LED module.(3 LED Serial)

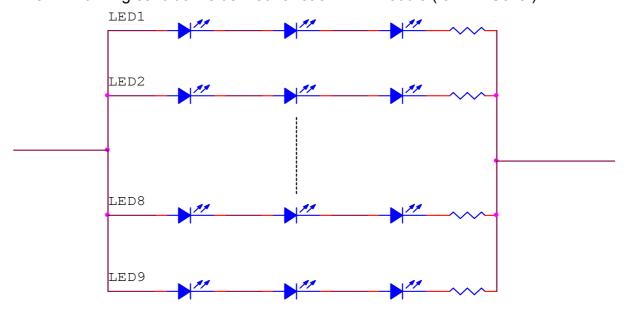

The copyright belongs to InnoLux. Any unauthorized use is prohibited.



PAGE: 8/22

3.2. Timing Characteristics

3.2.1. Timing Conditions

ltom	Symbol	Values			l lmi4	Domanic	
Item	Symbol	Min.	Тур.	Max.	Unit	Remark	
Rising time	t _r	-	-	10	ns	Note 1	
Falling time	t _f	-	-	10	ns	Note 1	
High and low level pulse width	t _{CPH}	99	103	107	ns	CPH1~CPH3	
CPH pulse duty	t _{CWH}	40	50	60	%	CPH1~CPH3	
	t _{C12}						
CPH pulse delay	t _{C23}	30	t _{CPH} /3	t _{CPH} /2	ns	СРН1~СРН3	
	t _{C31}						
STH setup time	t _{SUH}	20	-	-	ns	STHR, STHL	
STH hold time	t _{HDH}	20	-	-	ns	STHR, STHL	
STH pulse width	t _{STH}	-	1	-	t _{CPH}	STHR, STHL	
STH period	t _H	61.5	63.5	65.5	μs	STHR, STHL	
OEH pulse width	t _{OEH}	-	1.22	-	μs		
Sample and hold disable time	t _{DIS1}	-	8.28	-	μs		
OEV pulse width	t _{OEV}	-	5.40	-	μs		
CKV pulse width	t _{CKV}	-	4.18	-	μs		
Clean enable time	t _{DIS2}	-	3.74	-	μs		
Horizontal display start	t _{SH}	-	0	_	t _{CPH} /3		
Horizontal display timing range	t _{DH}	-	1440	-	t _{CPH} /3		
STV setup time	t _{SUV}	400	-	-	ns	STVL, STVR	
STV hold time	t _{HDV}	400	-	-	ns	STVL, STVR	



PAGE: 9/22

				1710		
STV pulse width	t _{STV}	-	ı	1	t _H	STVL, STVR
Horizontal lines per field	t _V	256	262	268	t _H	Note 2
Vertical display start	t _{SV}	-	3	ı	t _H	
Vertical display timing range	t _{DV}	-	234	ı	t _H	
V _{COM} rising time	t _{rCOM}	-	-	5	μs	
V _{COM} falling time	t _{fCOM}	-	-	5	μs	
V _{COM} delay time	t _{DCOM}	-	-	3	μs	
RGB delay time	t _{DRGB}	-	-	1	μs	

Note 1: For all of the logic signals

Note 2: Please don't use odd horizontal lines to drive LCD panel for both odd and even field simultaneously.



PAGE: 10/22

3.2.2. Timing Diagram

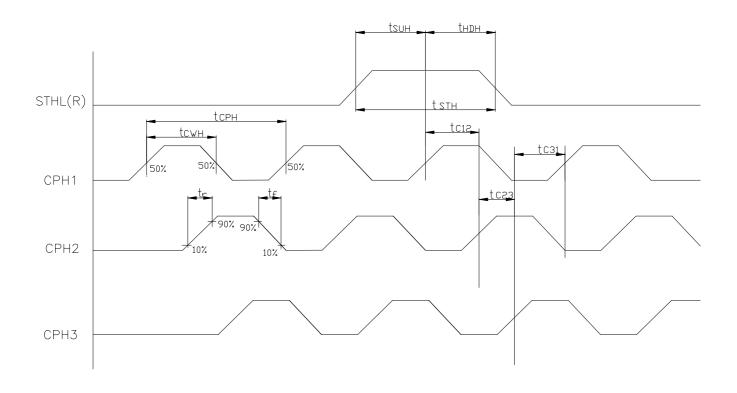


Fig.3-1 Sampling clock timing

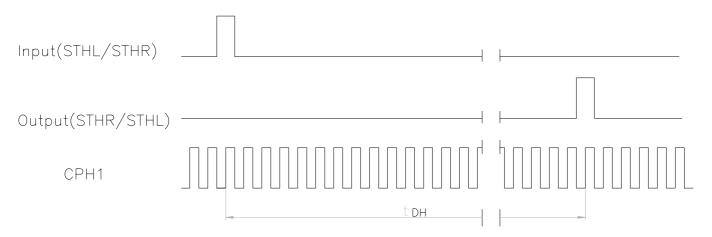


Fig.3-2 Horizontal display timing range



PAGE: 11/22


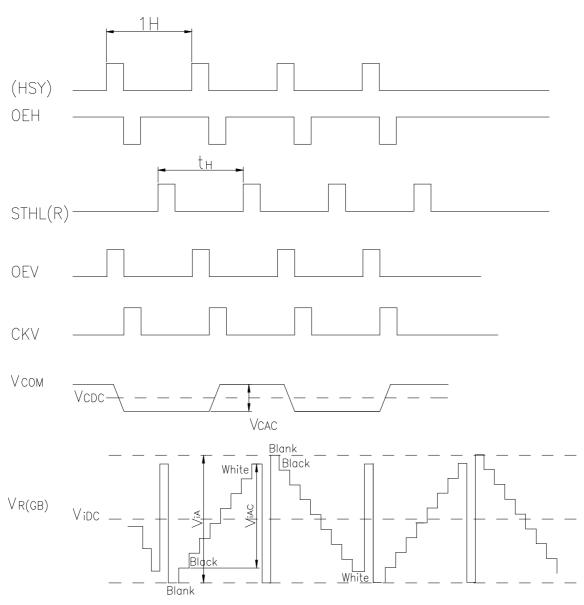


Fig.3-3-(a) Horizontal timing



PAGE: 12/22

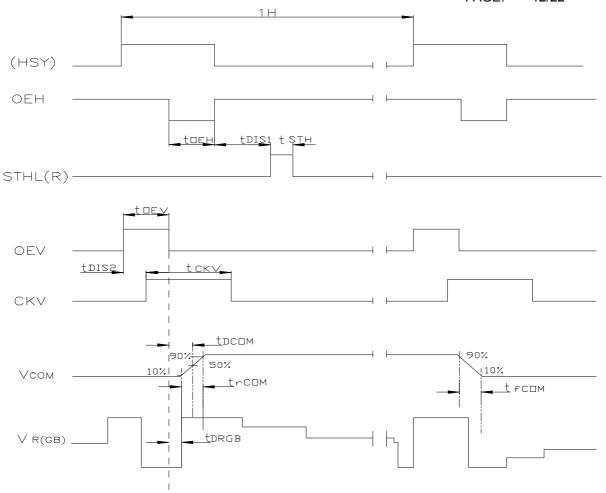

Note: The falling edge of OEV should be synchronized with the falling edge of OEH Fig.3-3-(b) Detail horizontal timing

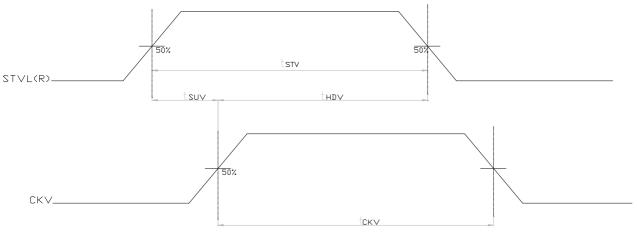


Fig.3-4 Vertical shift clock timing

PAGE: 13/22


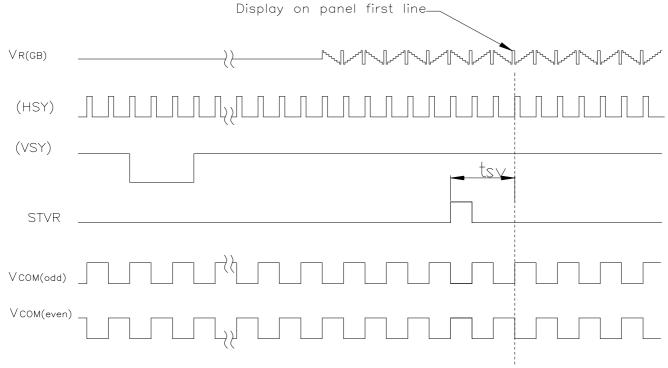


Fig.3-5(a) Vertical timing (from up to down)



The copyright belongs to InnoLux. Any unauthorized use is prohibited.

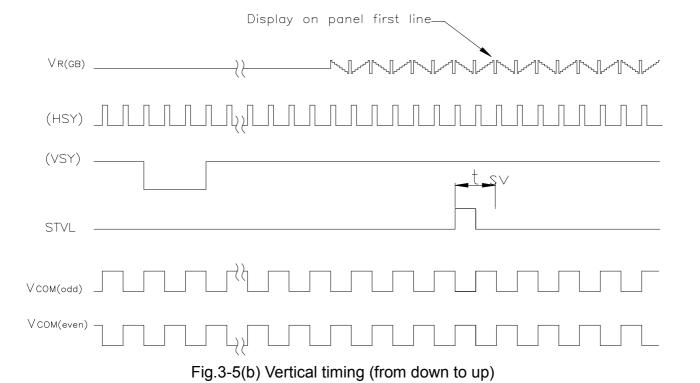

PAGE: 14/22

4. Optical Specifications

Item	Symbol	Symbol Condition -		Values			Remark
item	Symbol	Condition	Min.	Тур.	Max.	Unit	Remark
	θ_{L}	Φ=180°(9 o'clock)	50	60	-		
Viewing angle	θ_{R}	Ф=0°(3 o'clock)	50	60	-	dograe	Note 1
(CR≥10)	R≥10) θ _T C	Φ=90°(12 o'clock)	30	40	-	degree msec msec	
	θ_{B}	Ф=270°(6 o'clock)	50	60	-		
Despense time	T _{ON}		-	15	30	msec	Note 3
Response time	T _{OFF}		-	20	40	msec	Note 3
Contrast ratio	CR		250	300	-	-	Note 4
	W _X	Normal θ=Φ=0°	0.26	0.31	0.36	-	Note 2
Color chromaticity	W _Y		0.28	0.33	0.38		Note 5 Note 6
Luminance	L		300	350	-	cd/m ²	Note 6
Luminance uniformity	Yu		70	75	-	-	Note 7

Test Conditions:

- 1. V_{CC} =5V, AV_{DD} =5V, I_L =20mA (Backlight current), the ambient temperature is 25 $^{\circ}$ C.
- 2. The test systems refer to Note 2.



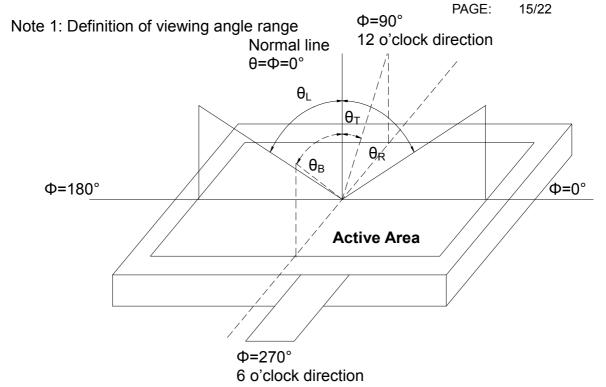


Fig. 4-1 Definition of viewing angle

Note 2: Definition of optical measurement system.

The optical characteristics should be measured in dark room. The optical properties are measured at the center point of the LCD screen. (Response time is measured by Photo detector TOPCON BM-7, other items are measured by BM-5A/Field of view: 1° /Height: 500mm.)

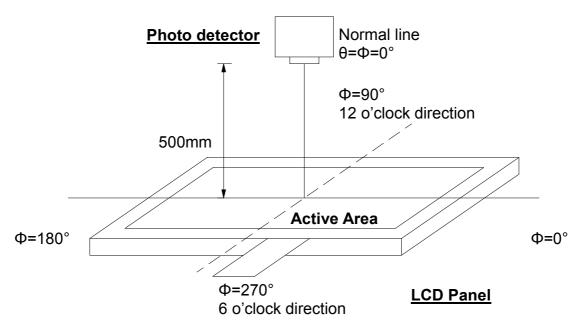


Fig. 4-2 Optical measurement system setup



PAGE: 16/22

Note 3: Definition of Response time

The response time is defined as the LCD optical switching time interval between "White" state and "Black" state. Rise time (T_{ON}) is the time between photo detector output intensity changed from 90% to 10%. And fall time (T_{OFF}) is the time between photo detector output intensity changed from 10% to 90%.

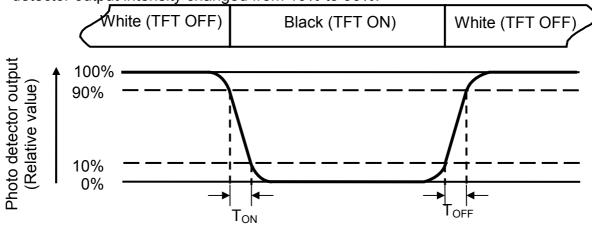


Fig. 4-3 Definition of response time

Note 4: Definition of contrast ratio

Contrast ratio (CR) = Luminance measured when LCD is on the "White" state

Luminance measured when LCD is on the "Black" state

White $V_i = V_{i50\%} \pm 1.5 \text{ V}$

Black $V_i = V_{i50\%} \mu 2.0 V$

"±" means that the analog input signal swings in phase with V_{COM} signal.

"μ" means that the analog input signal swings out of phase with V_{COM} signal.

V_{i50%}: The analog input voltage when transmission is 50%

The 100% transmission is defined as the transmission of LCD panel when all the input terminals of module are electrically opened.

Note 5: Definition of color chromaticity (CIE1931)

Color coordinates measured at center point of LCD.

Note 6: All input terminals LCD panel must be ground while measuring the center area of the panel.



PAGE: 17/22

Note 7: Definition of Luminance Uniformity

Active area is divided into 9 measuring areas (Refer to Fig. 4-4). Every measuring point is placed at the center of each measuring area.

Luminance Uniformity (Yu) = $\frac{B_{min}}{B_{max}}$

L-----Active area length W----- Active area width

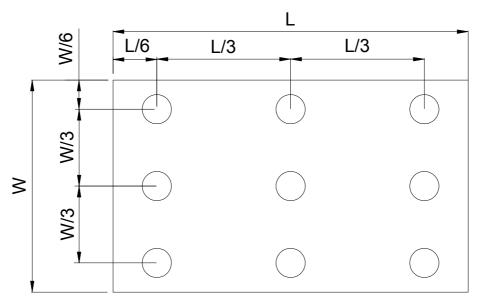


Fig. 4-4 Definition of measuring points

 \mathbf{B}_{max} : The measured maximum luminance of all measurement position. \mathbf{B}_{min} : The measured minimum luminance of all measurement position.



PAGE: 18/22

5. Reliability Test Items

(Note3)

Item	Test Co	nditions	Remark
High Temperature Storage	Ta = 85°C	240 hrs	Note 1
Low Temperature Storage	Ta = -30℃	240hrs	Note 1
High Temperature Operation	Ts = 85°C	240hrs	Note 2
Low Temperature Operation	Ta = -30°C	240hrs	Note 1
Operate at High Temperature and Humidity	+60℃, 90%RH max.	240 hrs	
Thermal Shock	-30°C/30 min ~ +85°C/3 cycles, Start with cold to with high temperature		
Vibration Test	Frequency range:10~5 Stroke:1.5mm Sweep:10Hz~55Hz~10 2 hours for each direct (6 hours for total))Hz	
Mechanical Shock	100G 6ms,±X, ±Y, ±Z 3 direction	3 times for each	
Package Vibration Test	Random Vibration: 0.015G*G/Hz from 5-2 from 200-500HZ 2 hours for each direct (6 hours for total)	·	
Package Drop Test	Height:60 cm 1 corner, 3 edges, 6 su	ırfaces	
Electro Static Discharge	± 2KV, Human Body	Mode, 100pF/1500Ω	

Note 1: Ta is the ambient temperature of samples.

Note 2: Ts is the temperature of panel's surface.

Note 3: In the standard condition, there shall be no practical problem that may affect the display function.



PAGE: 19/22

6. General Precautions

6.1. Safety

Liquid crystal is poisonous. Do not put it in your mouth. If liquid crystal touches your skin or clothes, wash it off immediately by using soap and water.

6.2. Handling

- 1. The LCD panel is plate glass. Do not subject the panel to mechanical shock or to excessive force on its surface.
- 2. The polarizer attached to the display is easily damaged. Please handle it carefully to avoid scratch or other damages.
- 3. To avoid contamination on the display surface, do not touch the module surface with bare hands.
 - 4. Keep a space so that the LCD panels do not touch other components.
- 5. Put cover board such as acrylic board on the surface of LCD panel to protect panel from damages.
- 6. Transparent electrodes may be disconnected if you use the LCD panel under environmental conditions where the condensation of dew occurs.
 - 7. Do not leave module in direct sunlight to avoid malfunction of the ICs.

6.3. Static Electricity

- 1. Be sure to ground module before turning on power or operating module.
- 2. Do not apply voltage which exceeds the absolute maximum rating value.

6.4. Storage

- 1. Store the module in a dark room where must keep at +25±10 $^{\circ}$ C and 65%RH or less.
- 2. Do not store the module in surroundings containing organic solvent or corrosive gas.
 - 3. Store the module in an anti-electrostatic container or bag.


6.5. Cleaning

- 1. Do not wipe the polarizer with dry cloth. It might cause scratch.
- 2. Only use a soft sloth with IPA to wipe the polarizer, other chemicals might permanent damage to the polarizer.



PAGE: 20/22

7. Mechanical Drawing

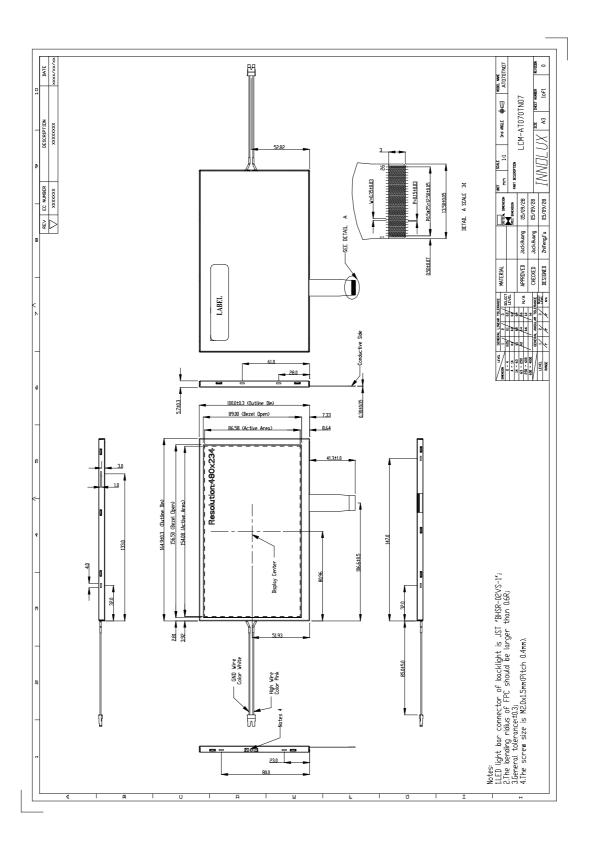



PAGE: 21/22

8. Package Drawing

8.1. Packaging Material Table

No.	Item	Model (Material)	Dimensions(mm)	Unit Weight (kg)	Quantity	Remark	
1	LCM Module	AT070TN07	164.9×100.0×5.7	0.167	50 pcs		
2	Partition	BC Corrugated paper	512×349×226	1.466	1 set		
3	Corrugated Bar	B Corrugated paper	512X11X3	0.046	4 set		
4	Dust-Proof Bag	PE	700X530	0.048	1 pcs		
5	A/S Bag	PE	180×133×0.2	0.002	50 pcs		
6	Carton	Corrugated paper	530*355*255	1.100	1 pcs		
7	Total weight	11.248±5%Kg					

8.2. Packaging Quantity

Total LCM quantity in Carton: no. of Partition 2 Rows x quantity per Row 25 = 50



PAGE: 22/22

8.3. Packaging Drawing

